



BS-180 BATHROOM SCALE INSTRUCTION MANUAL

For the purpose of proper using & maintaining the bathroom scale, please read this instruction completely before operating.

SPECIFICATIONS


- Equipped with high precision “strain-Gauge” sensor
- Plastic platform with chrome plate surrounding the scale
- Capacity: 5kg–180kg/396lb/28st
- Graduation: 0.1kg/0.2lb/1lb
- Unit: KG/LB/ST
- LCD Display
- With Blue Backlight
- Auto on
- Automatic zero resetting
- Auto-off function
- Overload indicator
- Low battery indicator

POWER

Battery: 3 x AAA batteries (Not included)

OPERATION

- When in the first use, please pull out the battery insulating strip.
- Place the scale on a hard and flat surface to ensure the greatest accuracy and reliability. Stand on the scale in balance and start to weigh. When the weight is locked, the figure will flash, now you can read it. (Press the switch on the bottom of the scale, you can choose KG, LB and ST)

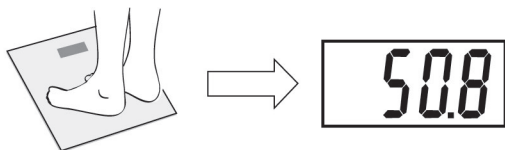

C FUNCTION

C function for Auto on: This gives an indication of an inaccurate reading if the zero reading at the end of the cycle does not match the previous zero reading. A big C will be displayed indicating the user must re-weigh.

C

AUTO OFF

When you step off the scale, it will automatically switch off. If no weighing is showed after zero is displayed, the scale will also automatically switch off after approximate 8 seconds. When the weight is locked, it will remain for 10 seconds, and then the scale will automatically switch off.

OVERLOAD INDICATOR

When the scale is overloaded (over 180kg), “oL” will display on the LCD. Please remove the weight immediately to avoid the damage of the scale

oL

LOW BATTERY INDICATOR

When the battery power is low, scale will display "Lo", please replace the battery in time.

Lo

ATTENTION

- The scale platform is glossy, be careful to not slip. The scale platform should be kept dry, and avoid being wet to avoid slip when weighing.
- When in proper use, this product only bears static pressure. When in improper use and get the impact, hit or drop, the scale is very easy to be damaged.
- Do not use any chemical cleanser to clean the scale. Clean your scale with a damp cloth, but do not immerse your scale into any liquid, as this can damage the inner parts.
- To ensure that the scales of life, please do not over-heat scale placed in the environment.
- Do not store the scale in an upright position but put in a horizontal position.
- Remove the batteries if the scale is not being used for a long time.
- If the scale can not be displayed, check whether the bad battery and contacts. If the scale has been a long time, may confirm to need to replace batteries again. If necessary, contact your local dealer or call our company directly.
- This scale is only used in household for body weight measurement, not for commercial or other use.

Brecknell Weighing Products
1000 Armstrong Dr.
Fairmont, MN 56031
Toll free: 800-637-0529
Tel: 507-238-8702 Fax: 507-238-8271
e-mail: sales@brecknellscales.com
www.brecknellscales.com